

28"

# SNICE-MITAR V1 PLAN


BUILD AT YOUR OWN RISK!

## MOTOR MOUNT

LIGHT PLY TRIM TO FIT

NOTE: AFTER ASSEMBLY, CUT INTO REAR OF FUSE TO INSTALL MOTOR. END OF MOTOR SHOULD BE FLUSH WITH END OF FUSE.

## WING FENCES

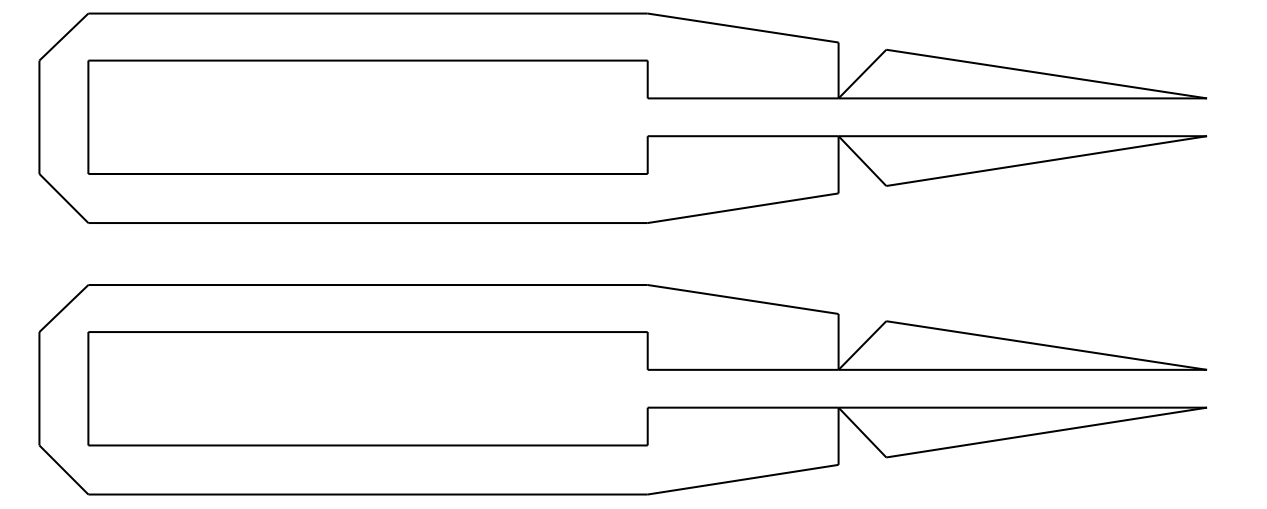

SPAR PLACEMENT

CG  CG

## MAIN WING

BOTTOM KF PANEL: X2

TOP KF PANEL: X2

BOTTOM SKID 1  
MOUNT TO INNER SIDE OF RUDDER 1

BOTTOM SKID 2  
MOUNT TO INNER SIDE OF RUDDER 2

1" X 1"

THIS SQUARE SHOULD MEASURE 1"X1"

BOTTOM FUSE

TOP FUSE

SIDE FUSE: X2

RUDDER 1

RUDDER 2

MOUNT LITE PLY OR POPSICLE STICK TO BOTTOM OF RUDDER FOR PROTECTION

FUSE DOUBLERS - TRIM TO FIT

SNICE-MITAR BY SNICE!  
FOR PERSONAL USE ONLY!

### E-Z ASSEMBLY GUIDE:

1. CUT PARTS
2. ASSEMBLE MODEL EXCEPT FOR TOP FUSE PIECE
3. INSTALL MOTOR AND MOTOR MOUNT
4. PLACE ELECTRONICS TO GET THE CORRECT CG
5. FIT SERVOS
6. INSTALL TOP FUSE
7. SAND FUSE & WINGS, PAINT
8. CUT ACCESS HATCH, COOLING VENTS
9. INSTALL SERVOS & ELECTRONICS

